

Configuration guide for EX8000 Portable Pinpad

Dear customer,






We are pleased that you have chosen one of our terminals. We have already tested your EX8000 Portable Pinpad extensively and prepared it for operation. To put the unit into operation, please follow the following instructions.

- ① **Please store this document carefully.** The information on your terminal will be needed in the event of service or subsequent initialisation.


	Terminal ID:	
	ep2 Merchant-ID:	
	Password:	

Configuration of your terminal

- ① All selections and confirmations in the following images are made directly on the relevant terminal display.

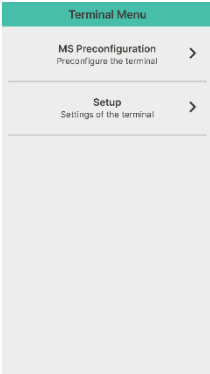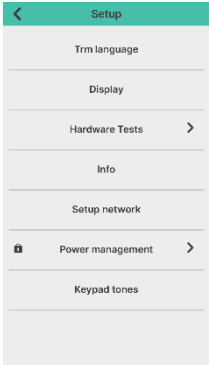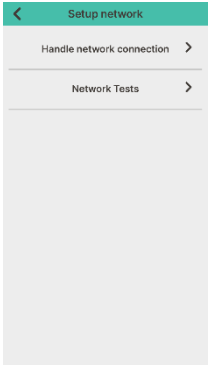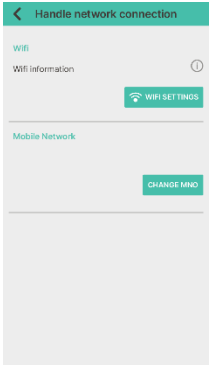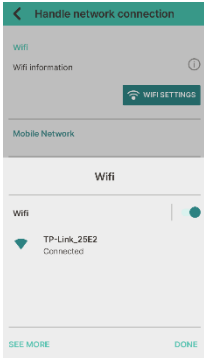
Step 1	Step 2	Step 3	Step 4	Step 5
				
Select <Setup>.	Select <Setup network>.	Select <Handle network connection>.	Select <WiFi Settings> to configure the parameters.	Select your network.

Step 6

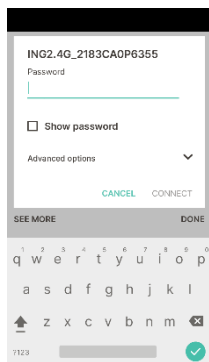


Enter your Wi-Fi password and select <Connect> to finish.

Step 7

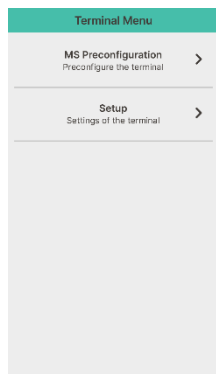


Go back to the configuration menu to start the configuration.

Step 8

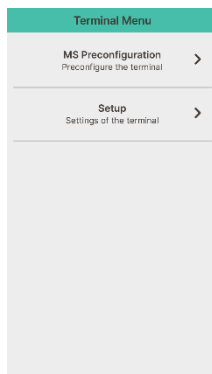


Select <MS Preconfiguration>.

Step 9

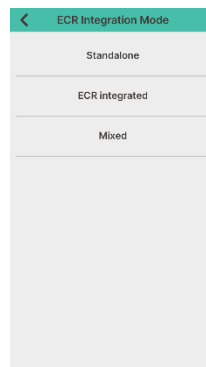


Choose <ECR Integrated>.

Step 10

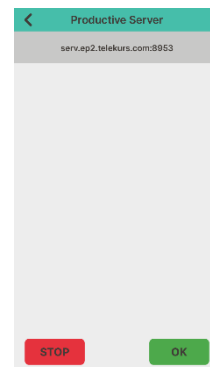


Confirm the productive server with <OK>.

Step 11

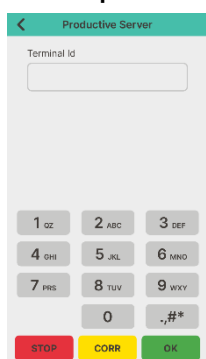


Enter the terminal ID and confirm with <OK>.

Step 12

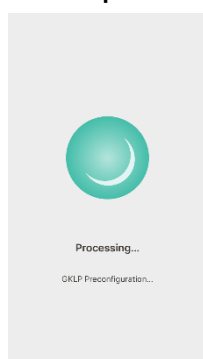

The current software will be loaded and the terminal will start the initialization process. This may take a few minutes.

Step 13

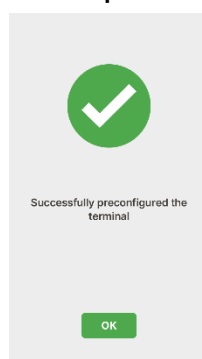

The configuration and initialization process is now completed. Please confirm both with <OK>.

Step 14



The terminal is ready for use.